



Facet Filter No: 045275
Boeing Part No: 10-60565-1

**Service and Technical Manual
for
Filter, Hydraulic, System "B" Return
Bulletin No. FPD2000.1**

March 1996

Facet Filter No: 045275

Boeing Part No: 10-60565-1

Table of Contents

	Page
Section I - Description of Operation	1
Section II - General Procedures	1
A. Cleaning and Preparation of Parts Prior to Reassembly	1
B. Test Fluids	2
C. Inspection of Parts	2
Section III - Maintenance and Overhaul Procedure	3
A. Filter Element and Bowl Removal	3
B. Element Cleaning and Servicing	3
C. Upstream Mechanical Shutoff Valve Removal and Servicing	3
D. Relief Valve Removal and Servicing	4
E. Downstream Shutoff Valve Removal and Servicing	4
F. Check Valve Removal and Servicing	4
Section IV - Component Test Procedures and Inspections	5
A. Filter Assembly	5
B. Filter Element	5
C. Upstream Mechanical Shutoff Valve	5
D. Relief Valve	6
E. Downstream Shutoff Valve	6
F. Check Valves	6
Section V - Flow Schematics and Component Diagrams	8
Figure A - Fluid Flow and Valve Function (Schematic Diagram)	9
Figure B - Filter Assembly Cross Section (Component Identification)	10
Figure C - Filter Assembly - Exploded View (Component Identification)	11
Parts List	12
Figure D - Installation Torque Values	13

Facet Filter No: 045275

Boeing Part No: 10-60565-1

I. Description of Operation

The function of the filter assembly is to filter all fluid returning to the hydraulic reservoir from System B.

The unit consists of a top head casting to which a bottom bowl is attached by means of a threaded coupling. This forms a pressure vessel having an operating pressure of 100 psi and a burst pressure of 400 psi minimum.

The filter element is rated at 10 microns and consists of a pleated stainless steel filtering medium which is attached to stainless steel end caps and a perforated core by mechanical locking.

All materials and fluid seals in the filter assembly are compatible with Skydrol 500 hydraulic fluid.

The head casting has five ports which are identified as follows:

Function	Port Number
Fluid Inlet	1
Pressure Fill	2
Outlet to Reservoir	3
To Thermoswitch	4
To Case Drain	5

Two cartridge type check valves are installed in the top head casting which prevent back flow along with mechanical shutoff valves which seal off the hydraulic system when the filter bowl is removed for element servicing. A relief valve is provided which allows the hydraulic fluid to bypass the filter element should it become clogged prior to regular servicing. The cracking pressure of this valve is 100 psi.

The fluid flow and valve functions are described schematically in Section V.

II. General Procedures

A. Cleaning and Preparation of Parts Prior to Reassembly

Note: The following procedures, while routine in manner, should be performed carefully since the inadequate cleaning of filter components could introduce contaminants into the hydraulic system and hence affect its operation.

Facet Filter No: 045275

Boeing Part No: 10-60565-1

1. **Cleaning of Metal Parts**

All metals parts should be washed with a suitable solvent such as trichloroethylene, carbon tetrachloride, or stoddard solvent prior to reassembly. After washing, the parts should be dried with a lint-free cloth, by blowing out with prefiltered air and then suitably protected from contamination (lint, fibers, etc.) until they are reassembled into the unit.

2. **Preparation of Metal Parts and Fluid Seals for Assembly**

Fluid seals or O-rings should be blown clean with prefiltered air and coated with Skydrol 500 hydraulic fluid or a thin film of HI-LO MS No.1 lubricant (Allube Corp, Glendale, CA) prior to assembly.

The mating or locating surfaces and threaded sections of metal parts should also be lubricated in a similar manner prior to reassembly.

B. Test Fluids

Fluids other than Skydrol 500 should not be allowed to contact fluid or O-ring seals, nor should they be introduced into the filter assembly since their compatibility with the elastomeric seals contained therein is not guaranteed.

C. Inspection of Parts

The threaded sections of metallic parts should be examined carefully prior to reassembly for wear, scoring, or mutilation. All parts with damaged threads should be replaced.

Fluid seals or O-rings should not be reused after disassembly regardless of condition, but should be replaced unless otherwise specified.

Scored, nicked, or otherwise damaged valve seats or sealing surfaces may be repaired by careful refinishing. Reworked components must pass the component tests specified in Section IV.

Respective portions of the filter assembly which have undergone servicing should be tested according to the procedures in Section IV.

Facet Filter No: 045275

Boeing Part No: 10-60565-1

III. Maintenance & Overhaul Procedure

Note: The parts referred to below by number (Plug No. 14 for example) are identified in Section V in the component diagrams.

A. Filter Element and Bowl Removal

To remove the filter bowl and element, unscrew bowl No. 2. Remove retainer No. 5 from bowl and remove element.

Remove O-ring No. 3 from element and O-ring No. 6 from filter head casting.

Reassemble in reverse order, torquing bowl No. 2 to the value shown in Section V. Lockwire components securely using lockwire No. 22 and lockwire seal No. 25.

B. Element Cleaning and Servicing

Place the filter element upright in a pan of solvent (trichloroethylene, etc) with the open end above the fluid level. After 15 minutes of soaking, lift out and rinse the outer surface with clean solvent. Do not brush or wipe element surfaces. Do not allow dirty solvent to get inside of the element. Other methods include slush-vapor degreasing or boiling in a solution of one pound of sodium hydroxide to one gallon of clean water followed by thorough water rinsing. After visible soil has been removed, the element should be placed in a fixture and reverse flushed (flow from inside to outside) with fluid prefiltered to 5 microns under pressure (not excessive) with a series of abrupt bursts of flow ending with a blast of clean air. Air should be prefiltered to 5 microns.

After cleaning, suitably protect the filter element from contamination until reinstallation.

C. Upstream Mechanical Shutoff Valve Removal and Servicing

Remove plug No. 14 and spring No. 12 from the head casting. Remove O-ring No. 13 from plug No. 14.

Remove valve No. 11 from the head casting and inspect the sealing faces for imperfections and foreign matter.

Replace or rework components as required and reassemble in reverse order.

Plug No. 14 should be torqued to the value shown in Section V and lockwired securely using lockwire No. 22 and lockwire seal No. 25.

Facet Filter No: 045275

Boeing Part No: 10-60565-1

D. Relief Valve Removal and Servicing

Remove filter element and bowl according to Section IIIA. Remove nipple No. 7 and tabwasher No. 8 from the head casting. Remove spring No. 9 and relief valve No. 10 from relief valve cavity in head casting.

Inspect relief valve sealing faces and relief valve seat in head casting for imperfections or foreign matter. Replace or rework components as required.

Reassemble in reverse order replacing tabwasher No. 8. The nipple No. 7 should be torqued to the value specified in Section V and locked securely by bending the tabs on tabwasher No. 8 into the proper position.

E. Downstream Shutoff Valve Removal and Servicing

Remove adapter No. 21 from the head casting. Remove O-ring No. 13 from adapter No. 21.

Remove spring No. 20 and valve No. 19 from the head casting. Inspect valve sealing faces and valve seat in head casting for imperfections or foreign matter. Replace or rework components as required and reassemble in reverse order.

Adapter No. 21 should be torqued to the value shown in Section V and lockwired securely using lockwire 22 and lockwire seal No. 25.

F. Check Valve Removal and Servicing

Remove screws No. 16 and withdraw check valve No. 15 from check valve cavity in head casting.

Remove O-ring No. 17 from check valve and replace. Remove O-ring No. 18 and replace if defective.

Inspect check valve flapper seal for imperfections or foreign matter. Replace check valve assembly if flapper seal is defective.

Reassemble in reverse order, torquing screws No. 16 to the value specified in Section V. Lockwire screws No. 16 using lockwire No. 22 and lockwire seal No. 25.

Facet Filter No: 045275

Boeing Part No: 10-60565-1

IV. Component Test Procedures and Inspection

Note: Skydrol 500 hydraulic fluid must be used for the following test and should be held at a temperature of $80\pm 10^{\circ}\text{F}$ during testing unless otherwise noted.

A. Filter Assembly

If any component in the filter assembly has been removed for servicing, the following test should be performed prior to the reinstallation of the assembly into the aircraft.

With all other fluid ports suitably plugged and trapped air bled off from the filter assembly, a fluid pressure of 200 psi should be applied to inlet port No. 1 in the head casting. This pressure should be held for a period of two minutes, reduced to zero, and then reapplied for another two minutes.

This procedure should then be repeated again except that the fluid pressure should be 2 psi.

If leakage occurs during this test, the leaking component should be removed from the filter and its respective O-ring or fluid seal and sealing surfaces be inspected for imperfections or foreign matter.

After reassembly, the above pressure test should be repeated.

B. Filter Element

After cleaning, the filter element should be closely inspected for damage or punctures. If no damage is apparent, the element may be reassembled into the filter housing as noted in Section IIIA. After reassembly, the filter assembly should be flow tested on a suitable test stand at a fluid flow rate of 12 gpm from port No. 1 to port No. 3. The pressure drop across the filter assembly should not exceed 25 psi when measured according to ARP 24A.

If the pressure drop is in excess of 25 psi, the element should be removed and recleaned, and then retested. The element should be replaced if the pressure drop cannot be brought below 25 psi after two successive element cleanings.

C. Upstream Mechanical Shutoff Valve

With the filter bowl and element removed, fluid port No. 2 blocked, and all trapped air removed from the upstream region of the head casting, apply a fluid pressure of 2 psi to port No. 1 for three minutes. Inspect the head casting assembly No. 27 for leakage from the region of shutoff valve No. 11.

Facet Filter No: 045275

Boeing Part No: 10-60565-1

If leakage is in excess of 20 drops per minute, the valve should be removed and inspected according to Section IIIC making the necessary repairs.

The shutoff valve should then be retested as outlined above.

D. Relief Valve

With the filter bowl and element removed and port No. 2 blocked, bleed off all trapped air and apply a fluid pressure of 50 psi to inlet port No. 1. Gradually increase this pressure until a fluid flow of 3 cc per minute (60 drops per minute) is established through the relief valve or from nipple No. 7. The pressure at which this occurs is the relief valve cracking pressure and should be 100 ± 5 psi.

The fluid pressure should then be increased until a substantial flow (2 gpm minimum) is obtained from nipple No. 7. The inlet pressure should then be gradually reduced until a fluid flow of 2 cc per minute (40 drops per minute) appears at nipple No. 7. The pressure at which this occurs is the relief valve reseating pressure and should be no lower than 90 psi.

If the relief valve does not operate within the specifications listed above, all relief valve components should be removed and inspected according to Section IIID, replacing the necessary components. The relief valve should then be retested after reassembly.

E. Downstream Shutoff Valve

With a plugged check valve installed in place of downstream check valve No. 15 and with ports No. 4 and No. 5 blocked, apply a fluid pressure of 2 psi to port No. 3. Inspect the head casting for leakage through shutoff valve No. 19 or from nipple No. 7.

If leakage is in excess of 20 drops per minute, the shutoff valve should be removed and inspected according to Section IIIE, making the necessary repairs.

The shutoff valve should then be retested as outlined above.

F. Check Valves

1. Upstream Check Valve

With the filter bowl and element removed, apply a fluid pressure of 2 psi to port No. 2. This pressure should be held for a period of two minutes and reduced to zero. This test should then be repeated except with a fluid pressure of 50 psi.

Facet Filter No: 045275

Boeing Part No: 10-60565-1

If leakage in excess of 20 drops per minute appears at inlet port No. 1, upstream check valve No. 15 should be removed and inspected according to Section III F.

The above test should be repeated after the necessary servicing or check valve replacement.

2. Downstream Check Valve

With the filter bowl and element removed and port No. 2 blocked, apply a fluid pressure of 2 psi to port No. 1. This pressure should be held for a period of two minutes and then reduced to zero. This test should then be repeated except with a fluid pressure of 50 psi.

If leakage in excess of 20 drops per minute appears at ports No. 3, 4 or 5, down stream check valve No. 15 should be removed and inspected according to Section III F.

The above test should be repeated after the necessary servicing or check valve replacement.

Facet Filter No: 045275
Boeing Part No: 10-60565-1

V. Flow Schematics
and
Component Diagrams

Facet Filter No: 045275

Boeing Part No: 10-60565-1

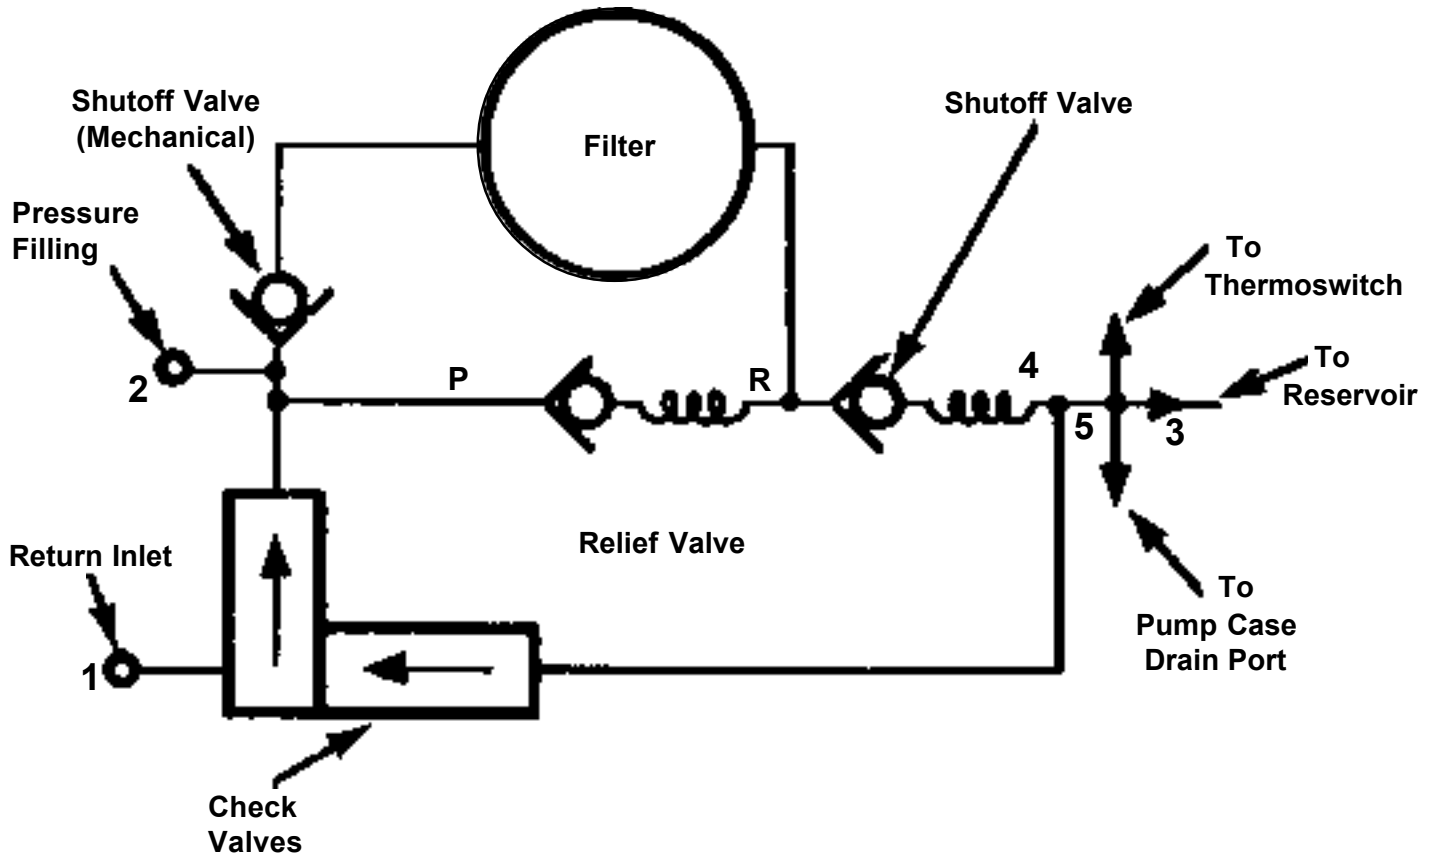


Figure A-
Fluid Flow and Valve Function Schematic Diagram

Facet Filter No: 045275

Boeing Part No: 10-60565-1

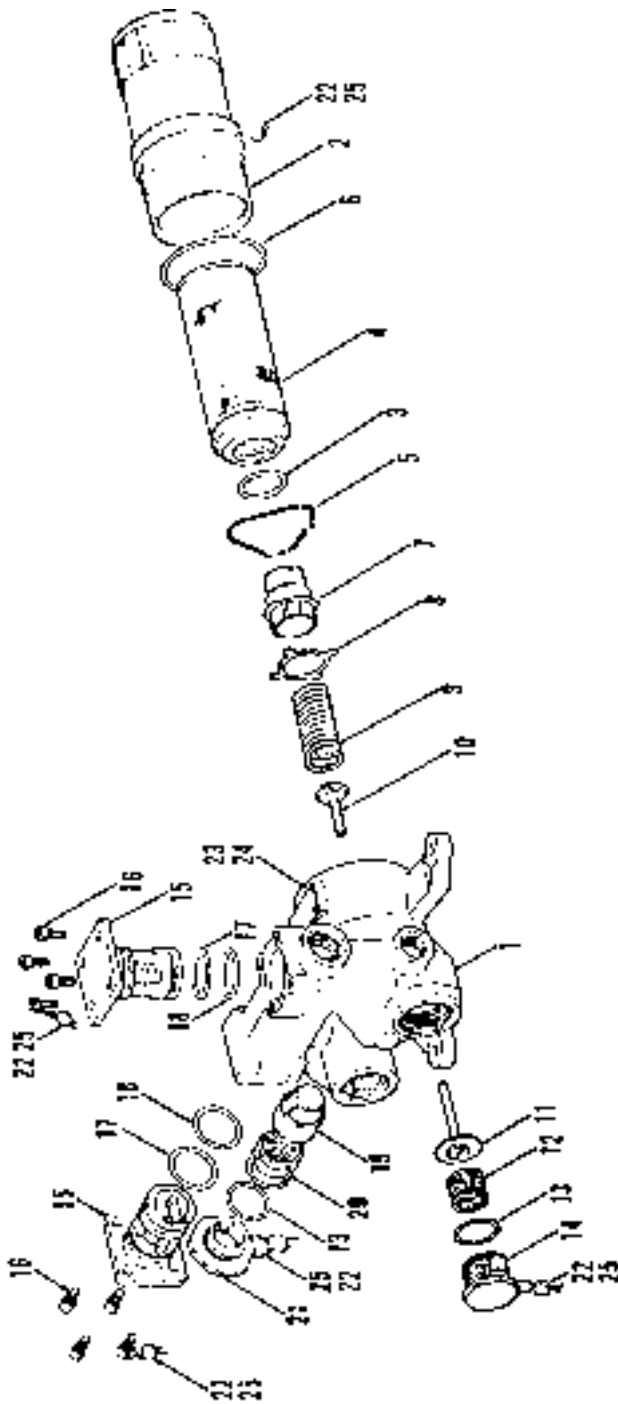


Figure C -
Filter Assembly Exploded View (Component Ident)

Facet Filter No: 045275

Boeing Part No: 10-60565-1

Parts List

Item No.	Part No.	Nomenclature	Units per Assy
1	048686	Head Assembly	1
2	048651	Bowl	1
3	049409	O-ring Element NAS 1611-214	1
4	044103	Element Assembly Boeing P/N 10-60566-2	1
5	048656	Retainer	1
6	049406	O-ring Bowl NAS 1611-140	1
7	048652	Nipple	1
8	569593	Washer - Tab	1
9	048685	Spring	1
10	048659	Valve - Bypass	1
11	048657	Valve - Shutoff	1
12	048684	Spring	1
13	049415	Gasket - Adaptor NAS 1612-12	2
14	048654	Plug	1
15	045618	Check Valve Boeing P/N 10-60567-1	2
16	049317	Screw	8
17	049408	O-ring Check Valve NAS 1611-213	2
18	049407	O-ring Check NAS 1611-212	2
19	048658	Valve - Shutoff - Assembly	1
20	048683	Spring	1
21	049162	Adapter	1
22	568997	Lockwire	AR
23	046954	Name Plate	1
24	29054	Drive Screw AN 535-0-2	4
25	048983	Seal - Lockwire	5

Facet Filter No: 045275

Boeing Part No: 10-60565-1

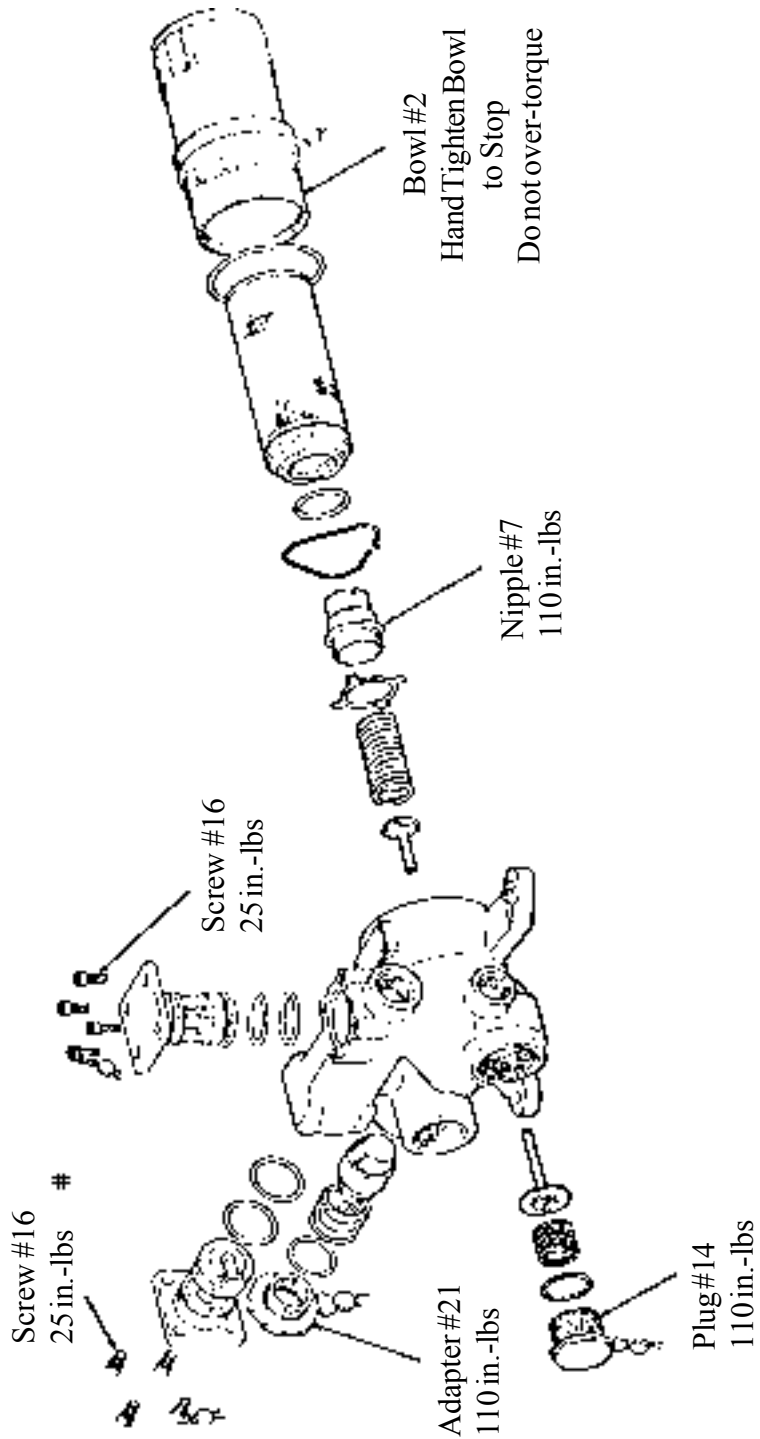


Figure D - Installation Torque Values